

## Safety rules

- This User Manual applies to Mobi-roller™ 1,5m / 5' (P/N 220464) and Mobi-roller™ 2m / 6.5' (P/N 220463).
- Follow strictly the user manual and read carefully the safety rules
- Read carefully all safety rules in the assembly manual (P/N 300542)
- Take into account your environment during the use: people, vehicle, slope, water...
- Never tow the Mobi-roller™ on public road.
- Never use the Mobi-roller™ for another application.
- Never use the Mobi-roller™ if damaged or if parts are missing.
- Never use with total matting length over:

	<b>Mobi-roller™ 1,5m / 5'</b>	<b>Mobi-roller™ 2m / 6.5'</b>
<b>AFX mat</b>	50,4m - 166'	30,4m - 100'
<b>A2X mat</b>	40,4m - 133'	30,4m - 100'



## Rolling up mat

**Step 1: Place the Mobi-roller™, about 40" - 1m from the loose end of the mat.**



**Step 2: Fold the mat towards the axle of the dispenser passing over the outer frame.**



**Step 3: Connect the mat to the axle thanks to the Mini I-connectors. Use 2 Mini I-connectors for the Mobi-roller™ 1,5m/5' and 4 Mini I-connectors Mobi-roller™ 2m/6.5'.**



**Step 4: Start rolling up the mat by pulling the dispenser. Push the handle towards the ground to facilitate the process.**



**Step 5: Strap the mat once it is rolled-up (use provided packing straps).**


## Unrolling mat

**Step 1: Position the Mobi-roller™ in the direction of deployment and remove the packing straps.**

**Step 2: Unroll the mat** by pushing the dispenser.


**Step 3: Disconnect the mat** from the dispenser once the mat is fully unrolled.

**Step 4: Anchor the mat** following the mat instruction manual.

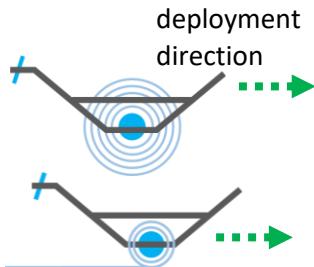

## Removable axle use (reloading)

The Mobi-roller™ allow using several loading axles with only one dispenser. That makes possible the dispenser reloading with another matting spool.

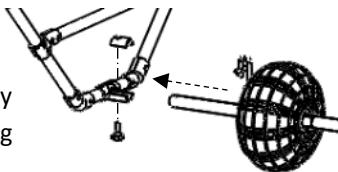

## Mobi-roller™ maintenance

- Clean regularly the dispenser with fresh water.
- Check regularly the screws tightening.