

This user notice refers to Cocobeach, the natural pathway.
Read carefully the following instructions and always follow the safety rules.

INSTALLATION

Required equipments:

1 hammer, 1 broom, and 1 or 2 people are sufficient for installing and removing the mat.

Step 1: Levelling the floor. Simply level the ground on the sand (or other type of ground) using a broom/rake, then unroll the mat flat on the surface.

Step 2: Fixing the mat on the ground. Once your mat has been unrolled on the ground, use a hammer to fix the stakes every 5m. All that's left to do is drive the stakes completely through the mat to ensure optimum fixing.

Special case: bend creation

To create bend(s), simply superimpose your two mats and secure the lower mat with the pile of the upper mat. The lower Cocobeach mat will provide enough flexibility to allow a stake to pass through.



UNINSTALLATION & MAINTENANCE

Step 1: Sweep the mat

We recommend that you sweep the mat before rolling it up to avoid weighing it down with residues and that you shake it regularly.


Step 2: Taking off stakes

If the stakes are firmly anchored in the ground, it may be necessary to use pliers to remove them more easily.

Step 3: Roll up the mat

All that's left to do is roll up your completely dry mat and use the carrying strap supplied with your Cocobeach for transportation and storage.

COCOBEACH

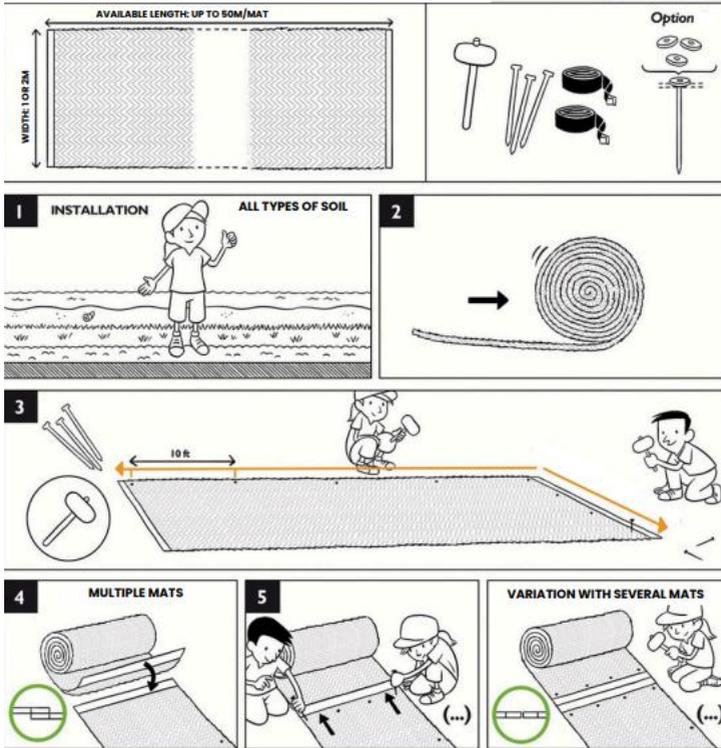

WARRANTY

DESCHAMPS offers a limited warranty of two (2) years from the date of purchase. This warranty only covers manufacturing defects in the product. Alterations due to normal use are not considered manufacturing defects. Damage caused by vandalism or the passage of vehicles (other than normal use of the product) is not covered by the warranty. The warranty does not apply to:

- normal wear and tear or improper use, maintenance or storage of the solution.
- accidents or natural disasters.
- modifications made to the solution without the written consent of DESCHAMPS.
- repairs made without the written consent of DESCHAMPS.
- labour or shipping costs that may be necessary if repairs are contemplated.

If you are not satisfied with the terms and conditions or the repairs made, please contact DESCHAMPS directly. Products may not be returned without the consent of DESCHAMPS. The two (2) years warranty is only applicable to the original purchaser.