





This user notice refers to all Mobi-mat® anti-slip access matting. Read carefully the following method and always follow the safety rules.

Direction for use

- Step 1: **Level the ground** with a rake and remove large stones and debris.
- Step 2: **Unroll the mat** at the desired place. The upside is the smooth side. The serial number label is on the downside.
- Step 3: **Anchor the first end of the mat**, starting with the spikes in the eyelets, then the staples in the rigid connector. The number of stakes and staples changes according to the width.

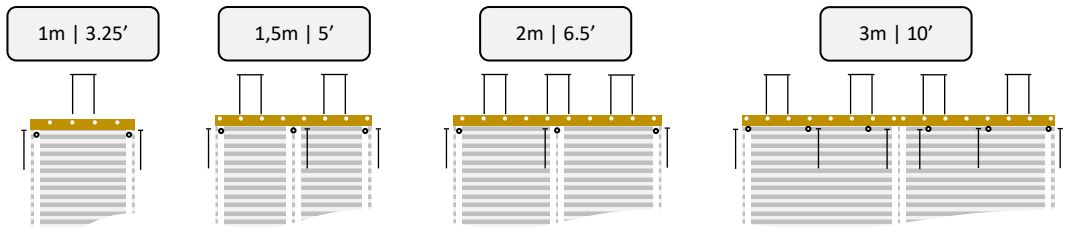


- Step 4: **Pull the mat taut** from the opposite end. Do not use vehicle to stretch the mat.
- Step 5: **Anchor the opposite end**, starting with the spikes in the eyelets, then the staples in the rigid connector. For a perfect finish, bury the end of the mat (dig a 10cm - 4" trench before anchoring the mat).
- Step 6: **Anchor the sides of the mat** (if equipped) **with spikes**.



Mat connection


- Step 1: **Align the two mats end-to-end**.
- Step 2: **Overlap the connectors** of the two mats [if necessary, reverse the mat end-to-end in order to get the correct end].
- Step 3: **Anchor the staples** through the overlapped connectors, and then the spikes in the eyelets.

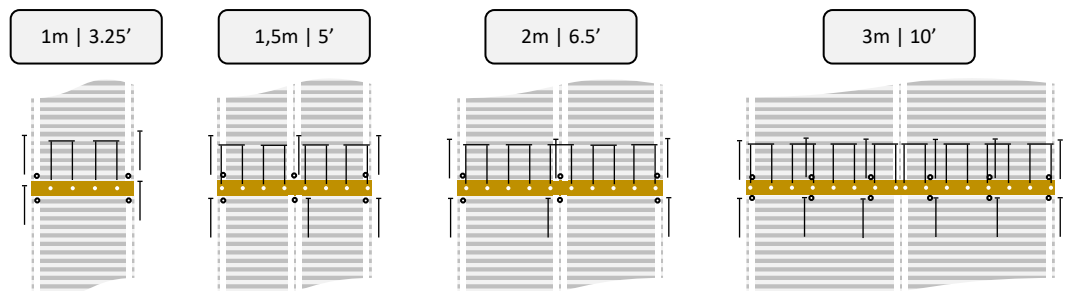

Connection between new design Mobi-mat (“h” connectors) with old design Mobi-mat (“C/X” connectors)

Step 1: Slide the “X” connector between the “h” connector and the “C” connector.

Step 2: Anchor the “X” connector and the “h” connector.

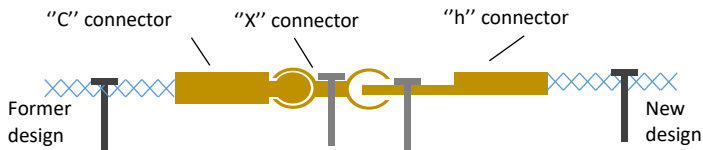

Maintenance

- Use a leaf blower or a broom to remove sand from the mat.
- If too much sand accumulates underneath, re-install it.
- Store the mats rolled-up, horizontally (do not store mats vertically).
- Before storage, rinse with clear water.

Safety rules:

- Check underground facilities (gas, electricity...) before installing the mats.
- Use safety glasses, gloves and shoes during installation.
- Never use for other applications.
- After installation check regularly that no part (stake, staple, spike...) can injure people or damage equipment (vehicle, wheelchair, building...).

Anchoring option:

- Concrete anchor
- Wood anchor
- Hard ground anchor
- Underwater anchoring on soft ground
- Underwater anchoring on hard ground



Enlighted optional feature:

- Install the mat following steps 1 to 6.
- Power the mat by plugging the device to the power input (USB 2.0).
- Power-off the mat by unplugging the device from the power input.
- Maximum allowed input voltage: 5 VDC (5 volt direct current)
- Make sure the adaptor and the electrical circuit allow 1 A