



This user notice refers to Mobi-fence™ our sand and dust fence. Read carefully the following method and always follow the safety rules.

Required material

Mobi-fence™ fabric

Wooden stakes: round and smooth if possible – not supplied but needed for the installation

- Ø 80mm | 3" for stakes of 100 mm | 4" and 2m | 6,5ft length
- Ø 100mm | 4" for stakes of 150 mm | 6" and 2m | 10ft length

Cutting material - not supplied but needed for the installation

Hot cut or soldering iron in order to avoid raveling.

Setting material - not supplied but needed for the installation

Digger to push in the stakes, sand spade and hammer.

Installation

Operators: 2 people required minimum




Step 1: Prepare the Mobi-Fence™ at the expected length (cauterize the fabric with a soldering iron in order to avoid the raveling)
Be careful: Check that the wooden stakes, when digging in, do not ravel the fabric

Step 2: Prepare the ground by digging a drainage channel of about 100x100 mm | 4"x4".


Step 3: Unroll the Mobi-fence™.

Step 4: Insert the first stake in the 1st channel

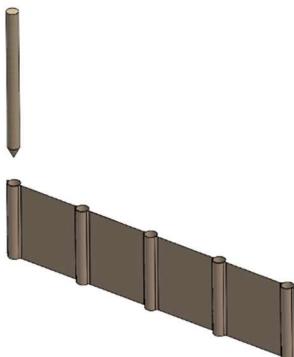

Step 5: Raise the set and dig in the first stake


Step 6: Insert the second stake in the second channel

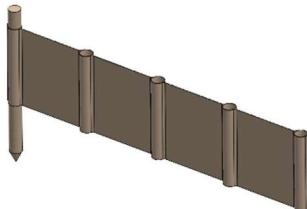

Step 7: Stretch the fabric at the maximum and dig in the second stake.

Step 8: Carry out the same operation to dig all stakes.

Step 9: After positioning the all length, add some sand at the bottom of the fabric, around 200mm | 8", in order to avoid the wind rushing under the fabric and making a hole.

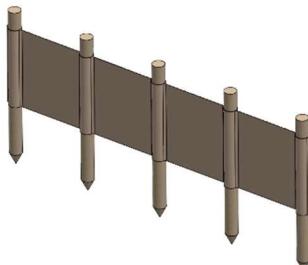

Safety rules

- Check underground facilities (gas, electricity...) before installing the fence.
- Use safety glasses, gloves and shoes during installation.
- Never use for other applications.
- After installation check regularly that no part can injure people or damage equipment (vehicle, building...).