

TECHNICAL GUIDE

Cocobeach



Cocobeach, cost-effective and natural access mat

TABLE OF CONTENTS

Product definition	02
General characteristics	02
Product accessories	03
Conditions of use and installation	03
Warranty	05
References	05

PRODUCT DEFINITION

Cocobeach is a geotextile made from coconut fibre. Cocobeach makes it possible to create temporary accesses on different types of ground. It's an economical and environmentally-friendly solution.

GENERAL CHARACTERISTICS

DIMENSIONS / TECHNICAL INFORMATIONS

Width:	1 m / 2 m
Length:	On request
Thickness:	10 mm
Weight:	1,950 kg/m ²
Delivery:	In rolls
Colours:	Natural beige
Materials:	Coconut fibre - Cotton strips

Note:

- Unlike synthetic fibres, coconut fibre is not easily flammable.
- It is easy to clean using a high-pressure water jet or a wire brush.

MAIN ASSETS

- **Customisable** : Adapts to your desires and gives you the option of creating curves
- **Ecological** : 100% natural and biodegradable materials
- **Economical** : Accessible and economical solution
- **Easy to maintain** : Simple to clean - sweep if necessary
- **Visual** : Blends into the landscape
- **Installation**: Quick to install and remove
- **Lifespan** : 2/3 years*

* : With regular maintenance - Roll up the carpet at the end of the season once its completely dry ad free of moisture.



PRODUCT ACCESSORIES

Spikes:

Stainless steel spikes to anchor the carpet to the various grounds. The spikes are galvanised and 50 cm long.



CONDITIONS OF USE AND INSTALLATION

MATERIAL REQUIRED

- Mallet or hammer
- Broom or rake

1 or 2 people are all you need to install and remove the carpet.

INSTALLATION

STEP 1: Levelling the floor

Simply level the ground on the sand (or other type of ground) using a broom/rake, then unroll the mat flat on the surface.

STEP 2: Fixing the mat on the ground

Once your mat has been unrolled on the ground, use a hammer to fix the stakes every 5m. All that's left to do is drive the stakes completely through the mat to ensure optimum fixing.

SPECIAL CASE:

To create bend(s), simply superimpose your two mats and secure the lower mat with the pile of the upper mat. The lower Cocobeach mat will provide enough flexibility to allow a stake to pass through.

UNINSTALLATION

STEP 1: Sweep the mat

We recommend that you sweep the mat before rolling it up to avoid weighing it down with residues, and that you shake it regularly.



STEP 2: Taking off the stakes

If the stakes are firmly anchored in the ground, it may be necessary to use pliers to remove them more easily.

STEP 3: Roll up the mat

All that's left to do is roll up your completely dry mat and use the carrying strap supplied with your Cocobeach for transportation and storage.

COCOBEACH

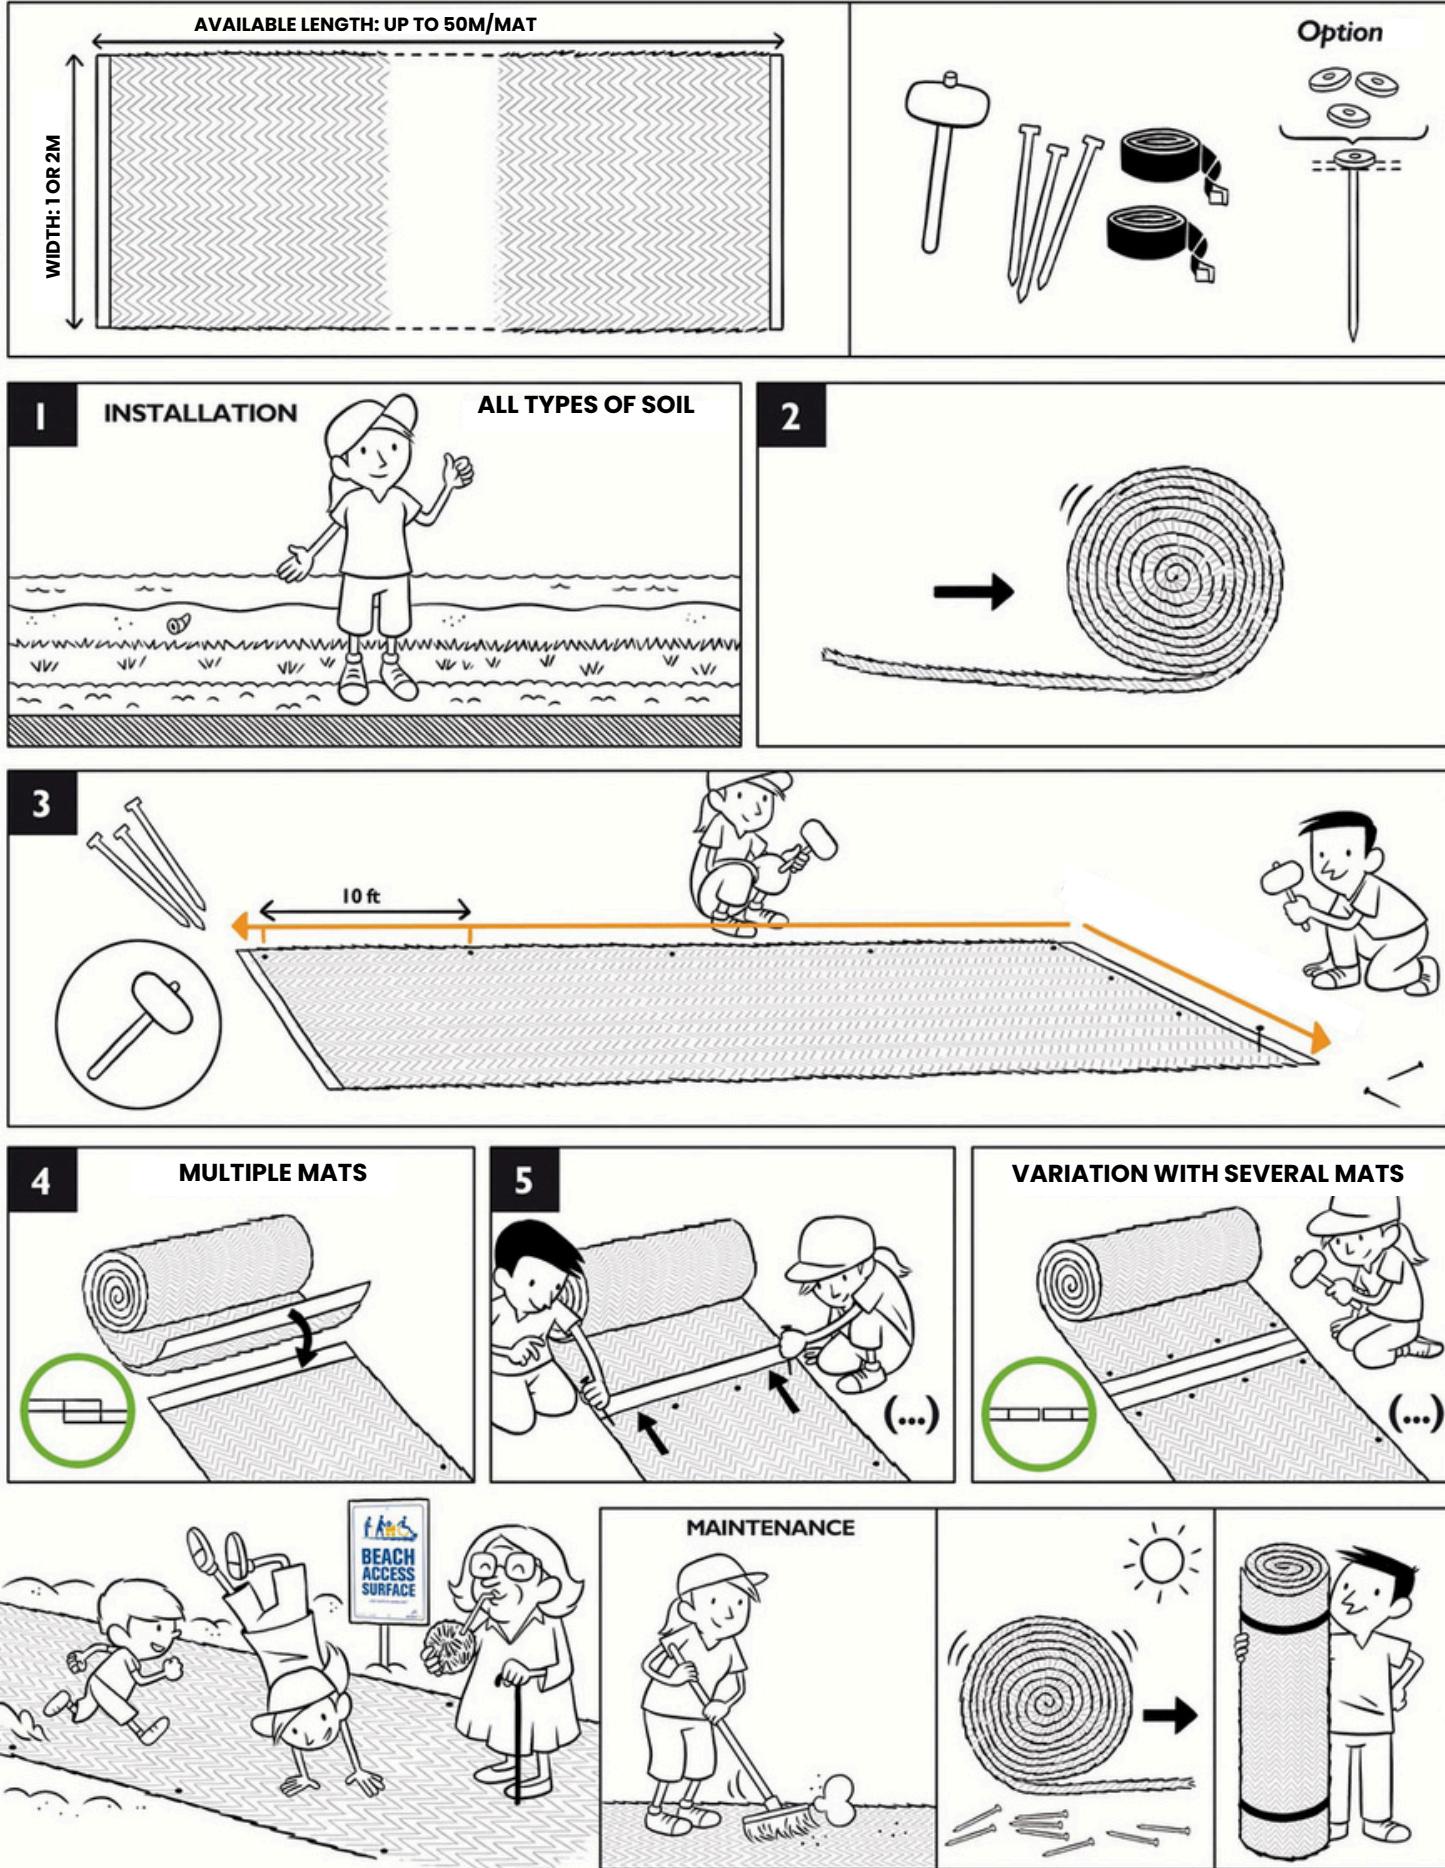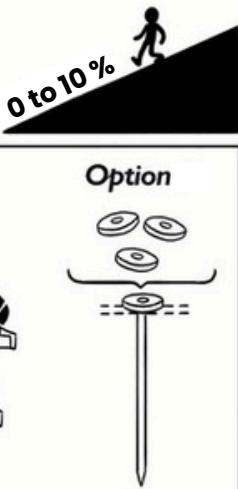

WARRANTY

Accessrec Europe offers a limited warranty of two (2) years from the date of purchase. This warranty only covers manufacturing defects in the product. Alterations due to normal use are not considered manufacturing defects. Damage caused by vandalism or the passage of vehicles (other than normal use of the product) is not covered by the warranty.

The warranty does not apply to:

- normal wear and tear
- improper use, maintenance or storage of the solution
- accidents or natural disasters
- modifications made to the solution without the written consent of Accessrec Europe
- repairs made without the written consent of Accessrec Europe
- labour or shipping costs that may be necessary if repairs are contemplated

If you are not satisfied with the terms and conditions or the repairs made, please contact Accessrec Europe directly. Products may not be returned without the consent of AccessRec Europe. The two (2) years warranty is only applicable to the original purchaser.

REFERENCES



Scan me to discover our full range of walkways and access mats