

TECHNICAL GUIDE

Marguerite - single cabin



PVC beach or garden cabin

TABLE OF CONTENTS

Product definition	02
General characteristics	02
Product accessories	02
Instructions for use and installation	03
Available colors	07
Warranty	08
References	08

PRODUCT DEFINITION

Marguerite is a single beach cabin that allows everyone to change out of sight. It is equipped with a mirror, a seat and a coat hook. Marguerite beach cabin is a practical, economical and removable solution.

It can easily be dismantled at the end of the summer season, in accordance with coastal legislation.

GENERAL CHARACTERISTICS

DIMENSIONS / TECHNICAL INFORMATION

INTERIOR DIMENSIONS – FLAT ROOF / **POINTED ROOF**:

- Width: 100 cm – **100 cm**
- Depth: 110 cm – **110 cm**
- Height: 200 cm – **245/195 cm**

EXTERIOR DIMENSIONS FLAT ROOF / **POINTED ROOF**:

- Width: 108 cm – **108 cm**
- Depth: 118 cm – **118 cm**
- Height: 210 cm – **250/200 cm**

DOORS:

- 180 x 60 cm with louver

WEIGHT: 100 kg

MATERIALS:

- PVC – extruded profiles, assembled and reinforced with wood or aluminum to hold the hinge if accessories are added
- Screws supplied in stainless steel and aluminum
- Interior color: white
- Use on: wood, concrete, grass, sand and soil

ASSETS

- Easy installation and uninstallation – cabin supplied as a kit
- Resists weather conditions such as strong winds and UV
- Italian manufacturing
- Meets current accessibility standards
- In accordance with coastal legislation
- Locking from the outside – vandal-proof



PRODUCT ACCESSORIES

- Mirror
- Coat hook
- Floor mounting bracket (L-shaped flange)
- Bolts and washers for roof fixing
- Bolts, nuts and washers for fixing the hook
- Screws for fixing the support to the cabin and for fixing the support to the ground
- Double throw locks (stainless steel-brass latch)


INSTRUCTIONS FOR USE / INSTALLATION

Step 1: Flatten the ground

Before starting assembly, prepare a rigid horizontal ground (wooden planks or concrete) on which the cabin can be placed.

Step 2:

Position the wall with the door (wall A).

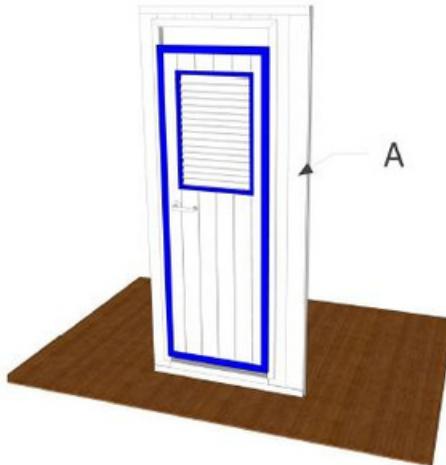

Step 3:

Insert the right and left joints, being careful not to mix them up. Match the left wall (wall B) to wall A and insert the joint from top to bottom. Do the same for the right wall (wall C) and the back wall (wall D).

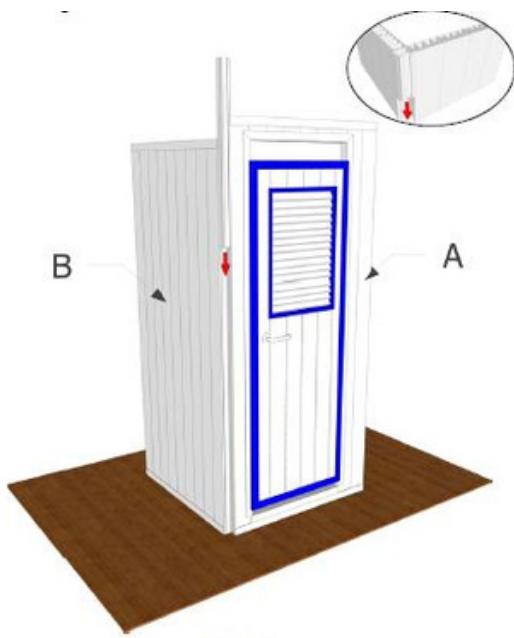


Fig. 2

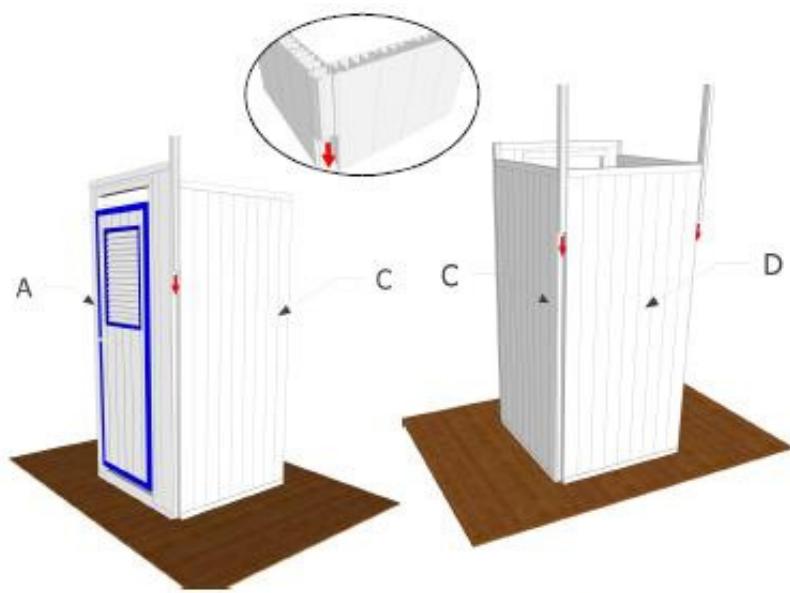


Fig. 3

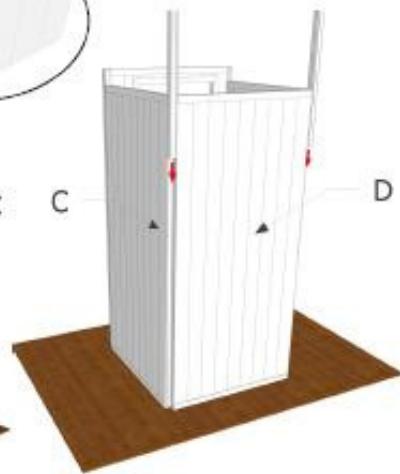


Fig. 4

NOTES:

The left and right walls are identical, therefore interchangeable. Once the walls are assembled, you must insert the handle into the door. Follow the instructions attached to the door.

Step 4:

Install the supports which must be placed against the wall

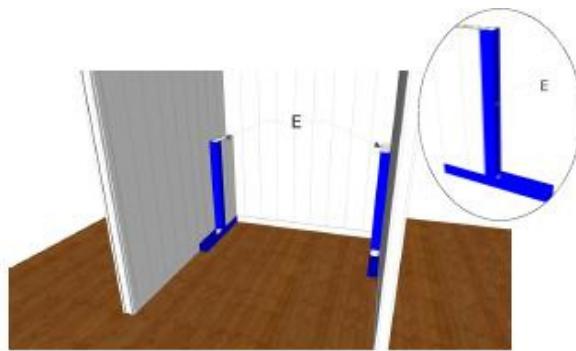


Fig. 5

Step 5:

Position the side supports of the seat. The cabin walls hold the bench supports in place. Then place the bench top on the supports.

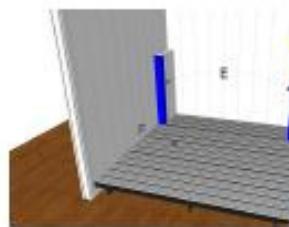


Fig. 6

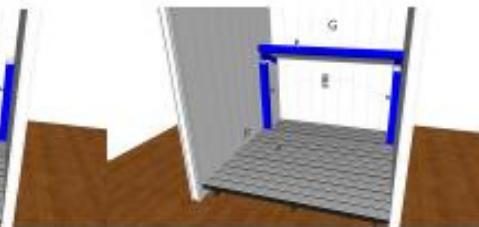


Fig. 7

Step 6:

The hooks can be attached to the right or left wall depending on your preferences. Make two holes on the chosen wall and attach two bolts (ref: ø6x70 stainless steel)

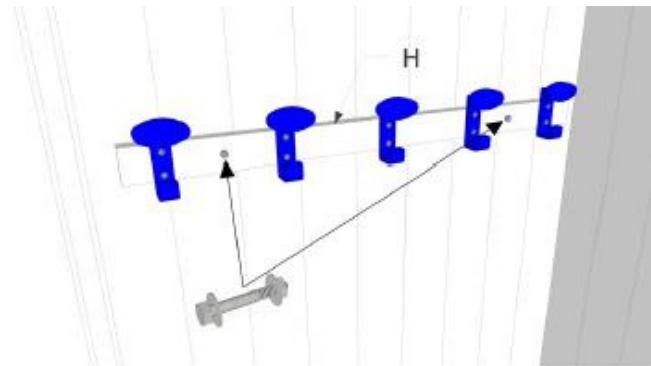


Fig. 8

Step 7:

The mirror comes with a hook. Install it at the desired height.



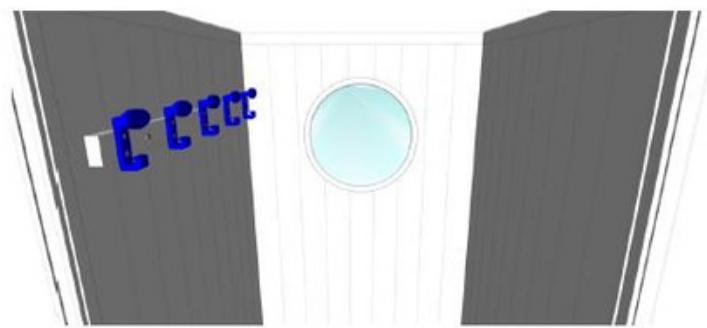


Fig. 9


Step 8 :

The roof is made up of a single panel with two hanging angles. Place the roof on the cabin ensuring that the "L" profiles remain inside the four walls.


FLAT ROOF :

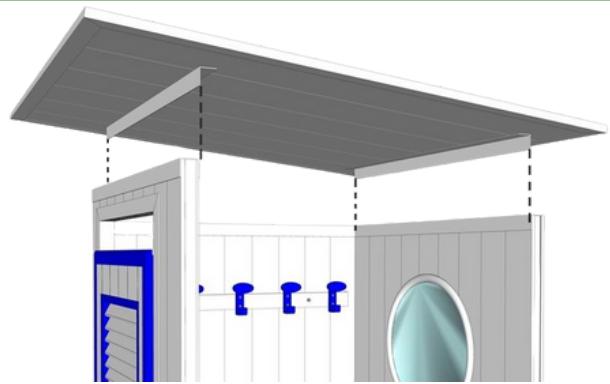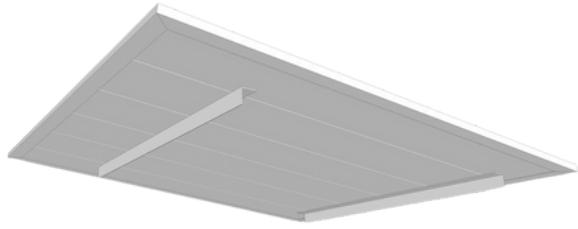

POINTED ROOF

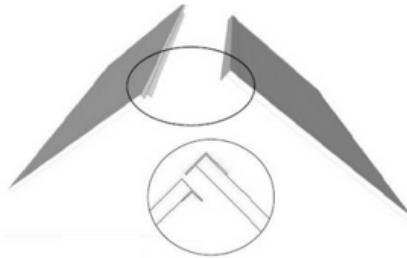

Panneau toit long


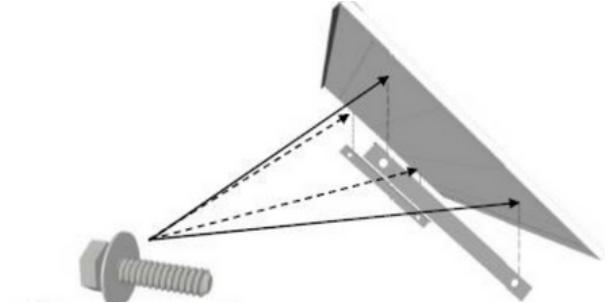


NOTES:

The part of the roof that protrudes furthest from the L-shaped profile must face the front


Step 9 :

Once the roof is positioned, check that the door opens correctly. If there are any imperfections, the door opening can be adjusted with small shims on the sides of the door. At this stage, you can proceed to attach the roof to the structure using the bolts.

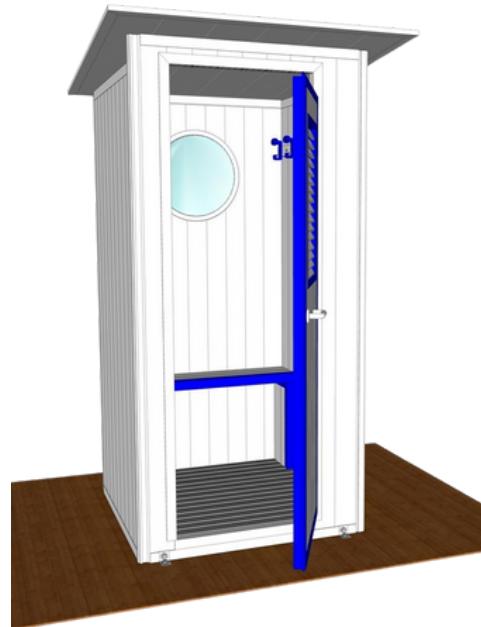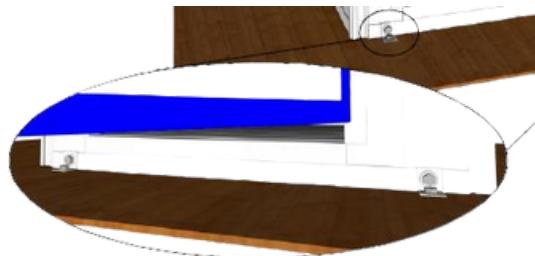


NOTES :


- The cabin can be anchored to the ground using the supports.
- The profiles are reinforced with aluminum or wood if accessories are added to consolidate the hinge.

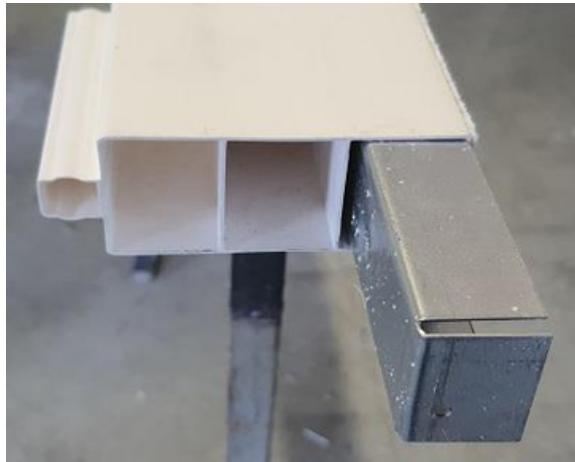


Profile reinforced with aluminum

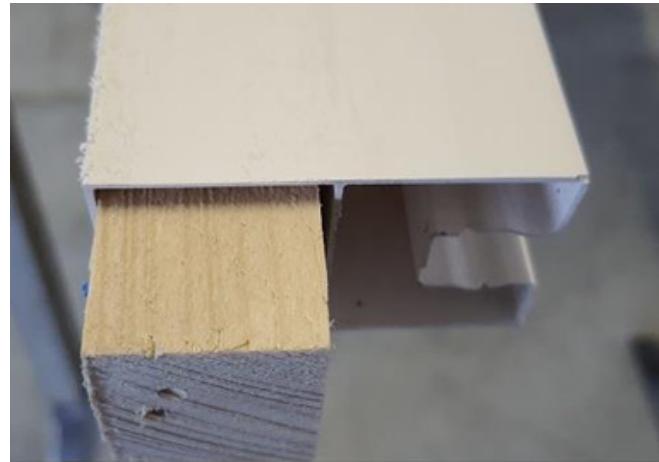

Profile reinforced with wood

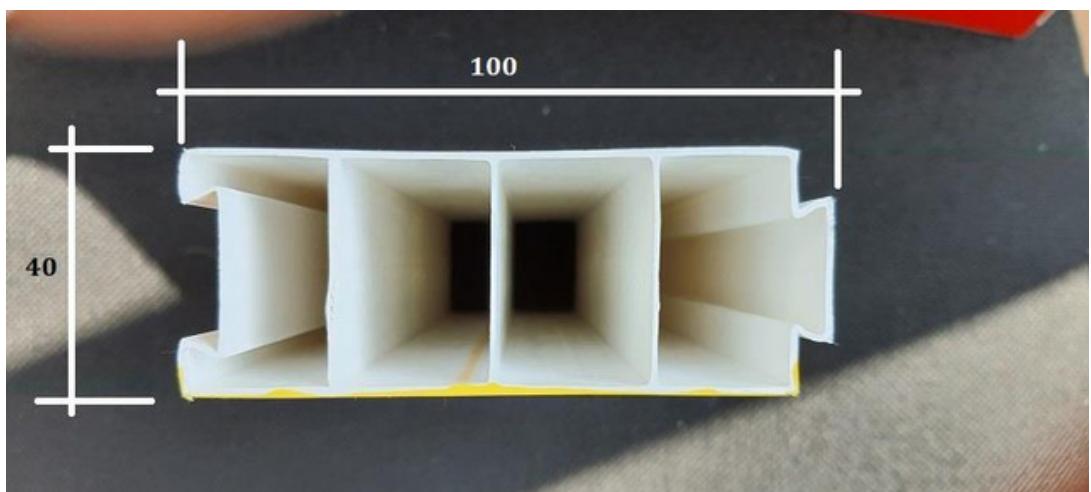


Profile used for the cabin walls

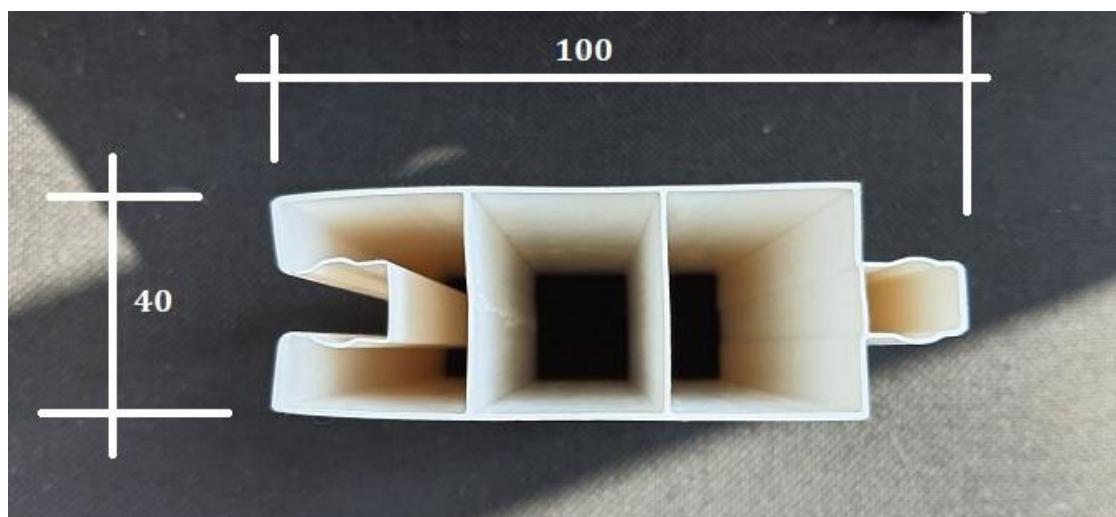

Profile used for the cabin roof

AVAILABLE COLORS

These colors are available upon request. Personalize your cabin according to your wishes.

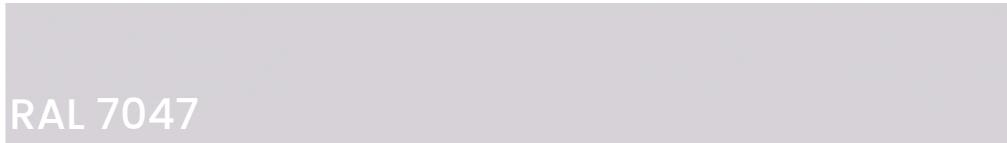

WARRANTY

Accessrec Europe offers a five (5) year warranty from the date of purchase. This warranty only covers manufacturing defects of the product. Alterations due to normal use are not considered manufacturing defects. Damage caused by vandalism is not covered by the warranty.

The warranty does not apply to:

- **normal wear and tear of solutions**
- **improper use, maintenance or storage of the solution.**
- **an accident or natural disaster**
- **modifications that have been made to the solution without the written consent of Accessrec Europe.**
- **repairs having been made without the written consent of Accessrec Europe.**
- labor or shipping costs that may be necessary if repairs are planned.

If you are not satisfied with the conditions provided or the repairs that have been made, please contact Accessrec Europe directly. Products cannot be returned without the consent of Accessrec Europe. The five (5) year warranty is only applicable to the original purchaser.

REFERENCES



Scan me to discover our range of wheelchairs and equipment