

TECHNICAL GUIDE

Romy PMR Beach Cabin



Our PMR Beach Cabin in PVC

CONTENT

Product description	02
General specifications	02
Product accessories	02
Instructions for installation and use	03
Available colours	07
Warranty	08
References	08

PRODUCT DESCRIPTION

Romy is a PRM beach changing room that allows everyone to change out of sight. It is equipped with a mirror, a seat and coat pegs. The Romy beach cabin is a practical, economical and removable solution that is accessible to everyone.

GENERAL SPECIFICATIONS

DIMENSIONS / TECHNICAL INFORMATION

INTERIOR DIMENSIONS :

- Width : 180 cm
- Depth : 180 cm
- Height under roof : 245 / 225 cm

EXTERIOR DIMENSIONS:

- Width : 188 cm
- Depth : 188 cm
- Height : 250 / 230 cm

MATERIALS :

- PVC (Polyvinyl chloride) – Extruded profile, assembled and reinforced with wood or aluminium to strengthen the hinge
- Stainless steel and aluminium screws supplied
- Interior colour : white
- Use on: wood, concrete, grass, sand and soil

DOOR:

- 180 x 90 cm with shutter

ASSETS



- Made in Italy
- Easy installation and removal (1-2 people) – supplied as a kit
- Résistant to salt, strong winds and UV rays
- Meets current accessibility standards
- Interior PMR grab bar

Product Accessories

- Mirror
- Coat Pegs
- Bolts and washers to fix the roof and the coat pegs
- Floor mounting : L-flange
- Screws and bolts to attach the bracket to the cabin and the floor
- Locks : double jet (stainless steel and brass latch)


INSTRUCTIONS FOR INSTALLATION AND USE

STEP 1 : FLOOR LEVELLING

The booth must be placed on a rigid base (minimum 2 cm thick wooden planks or concrete).

STEP 2 :

Position the wall with the door (wall A).

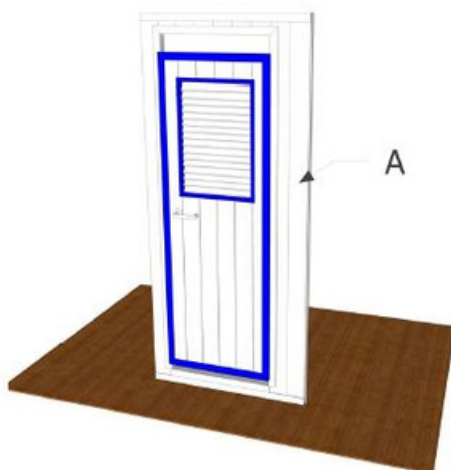

STEP 3 :

Insert the right and left angles, taking care not to swap them. Connect the left wall (wall B) to wall A and insert the joint from top to bottom. Do the same for the wall on the right side (wall C) and the back wall (wall D).

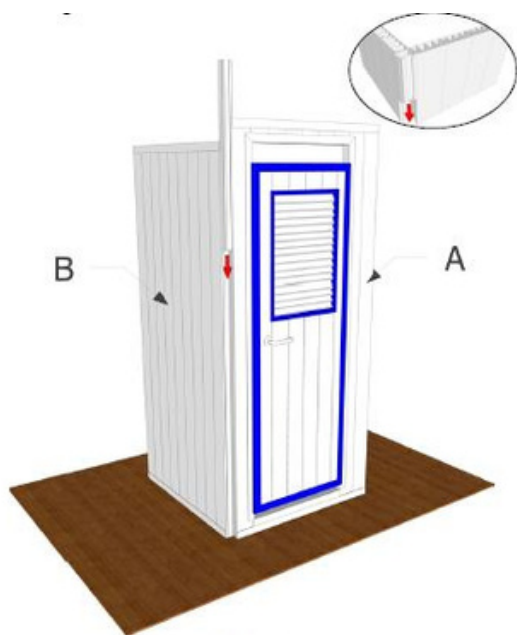


Fig. 2

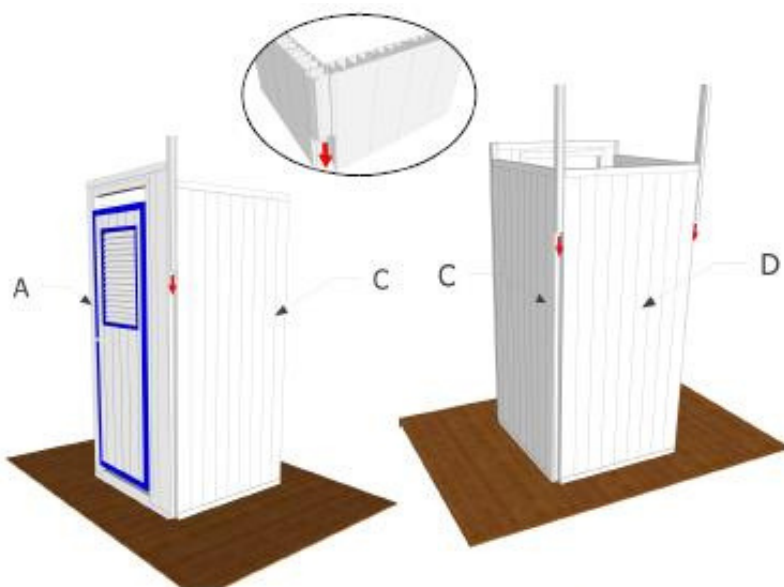


Fig. 3

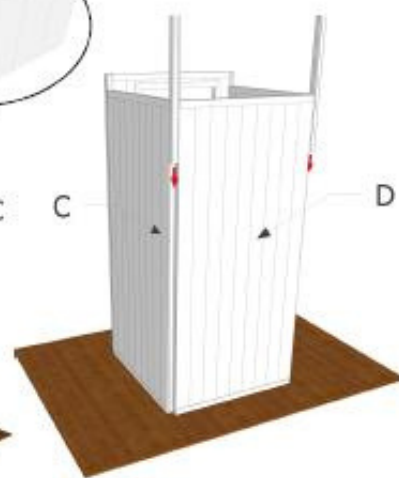


Fig. 4

NOTES :

The left and right walls are identical and therefore interchangeable. Once the walls are assembled, the handle must be inserted into the door. Follow the instructions included with the door.

STEP 4 :

The brackets must be placed against the wall.

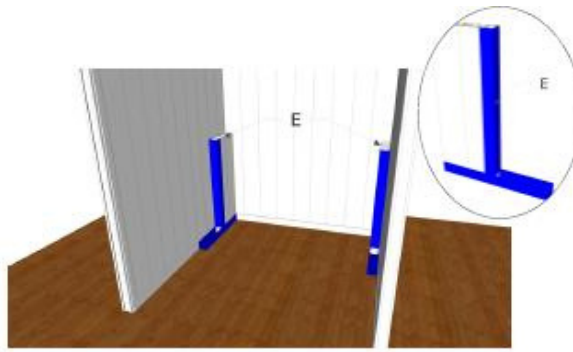


Fig. 5

STEP 5 :

Position the seat side stands. The cabin walls hold the bench stands in place. Then place the bench top on the stands.

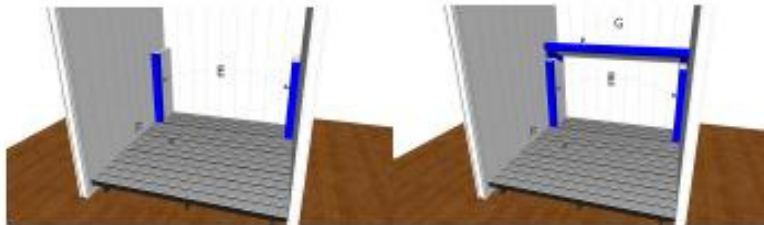


Fig. 6

Fig. 7

STEP 6 :

Pegs can be fixed to the left or right wall. Drill two holes on the chosen wall and fasten two bolts ($\varnothing 6 \times 70$ stainless steel).

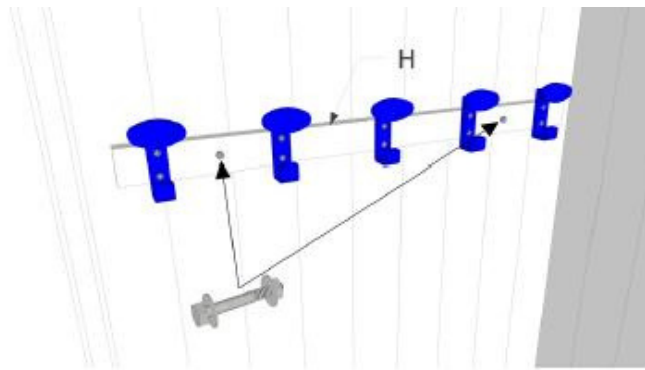


Fig. 8

STEP 7

The mirror is supplied with a hook, place it at the desired height.

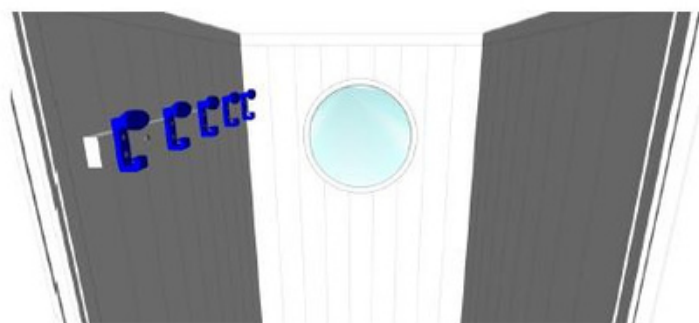
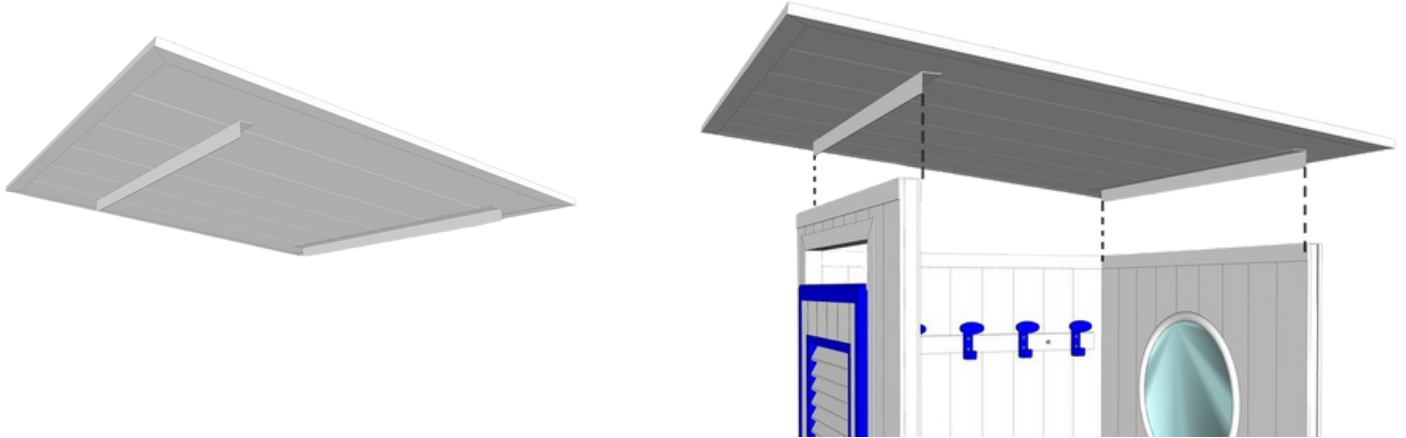


Fig. 9

STEP 8 :


The roof consists of a single panel with 2 fixing bars. Place the roof on the cabin, ensuring that the L-profiles remain inside the 4 walls.

**NOTES:**


The part of the roof that protrudes furthest from the L-section must face forwards.

STEP 9 :


Once the roof is in place, check that the door opens correctly. If there are any imperfections, the door opening can be adjusted using small wedges on the sides of the door. At this stage, you can fix the roof to the structure using the bolts.

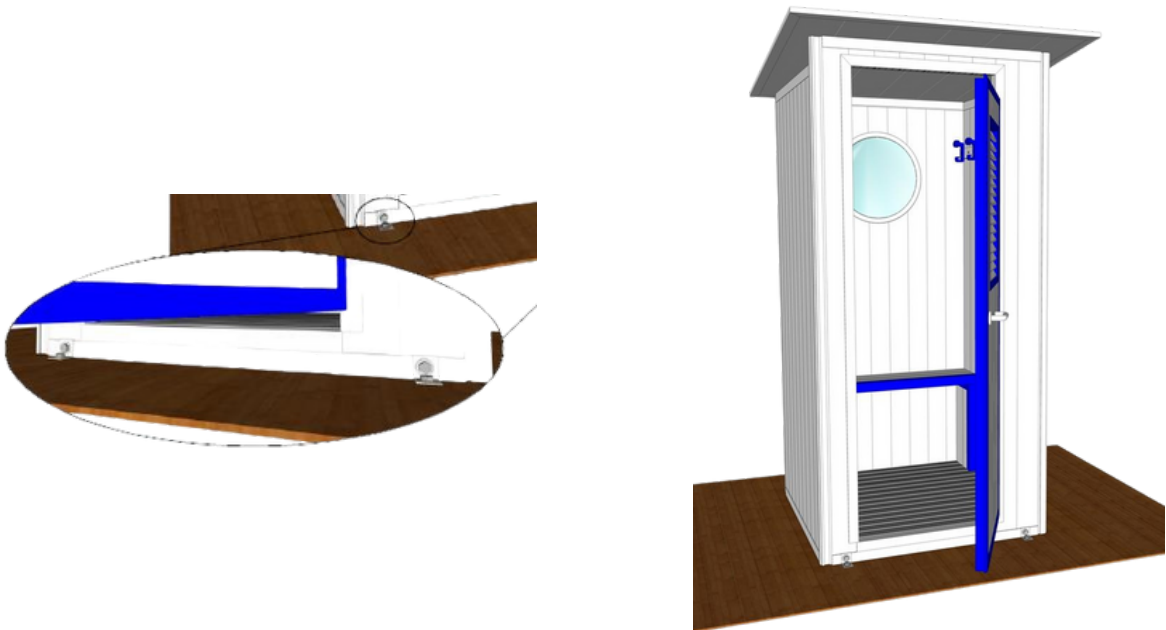**NOTES:**


- The cabin can be anchored to the ground using brackets.
- The profiles are reinforced with aluminium or wood to strengthen the hinge.

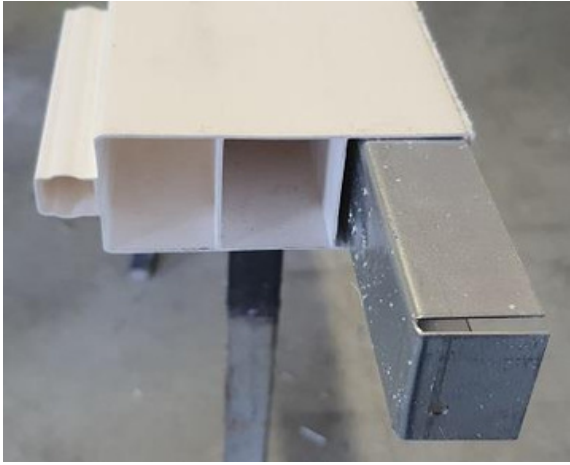


Aluminium reinforced profile

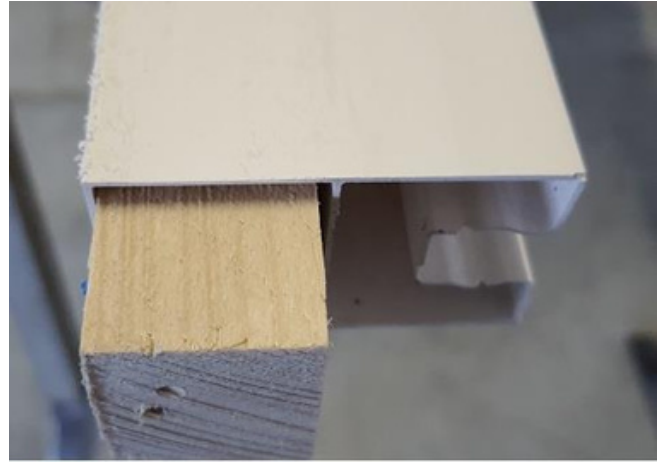

Wood reinforced profile

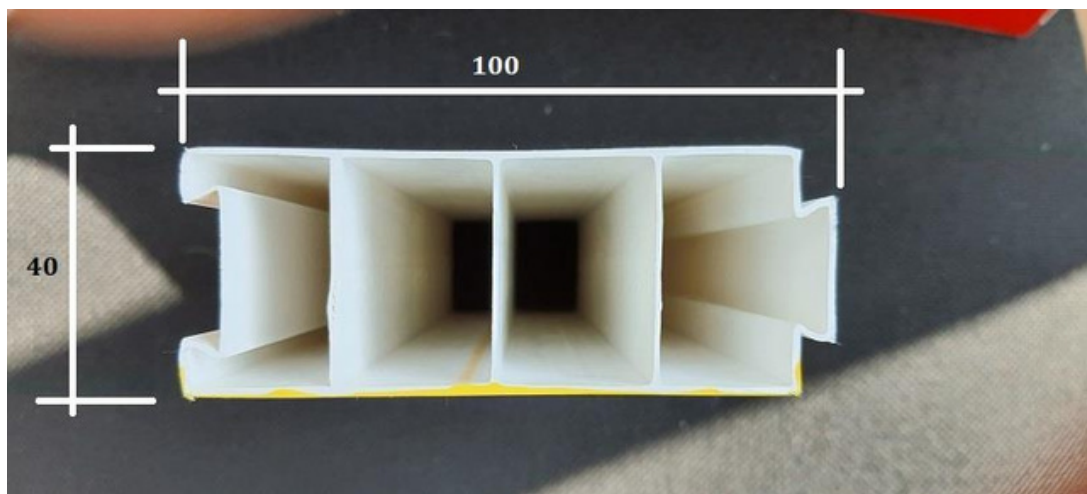

Profile used for the cabin walls

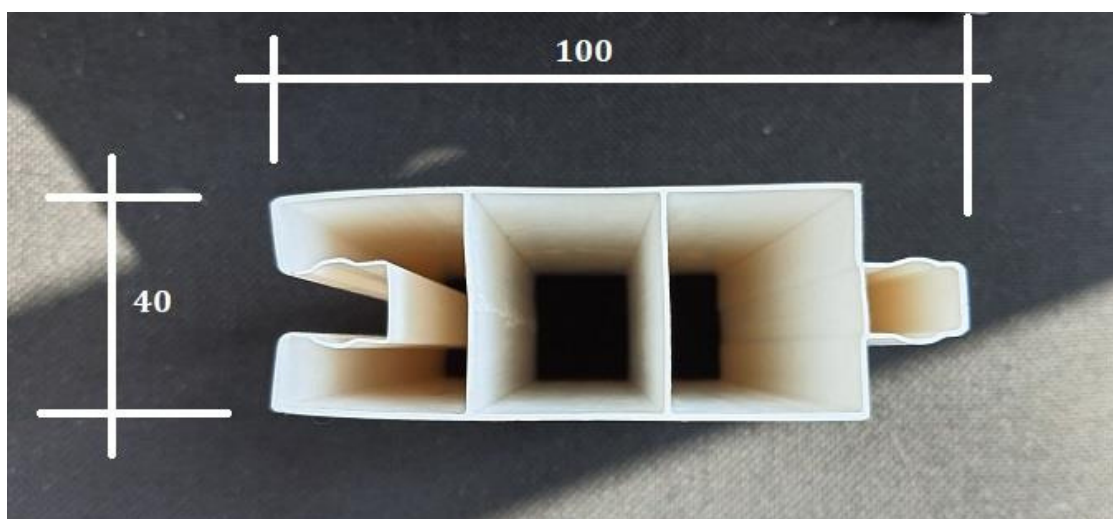

Profile used for the roof

AVAILABLE COLOURS

The following colours are available upon request. Customise your cabin as you wish.

RAL 6028

RAL 5015

RAL 5014

RAL 7047

RAL 1015

RAL 1018

RAL 2004

RAL 3031

RAL 7006

Available as from March 2024 :

RAL 6027

RAL 1019

WARRANTY

Accessrec Europe offers a five-year (5) warranty from the date of purchase. This warranty only covers manufacturing defects. Alterations due to normal use are not considered to be manufacturing defects. Damage caused by vandalism or the passage of vehicles (other than normal use of the product) is not covered by the warranty.

The warranty does not apply to :

- normal wear and tear of the solutions
- improper use, maintenance or storage of the solution
- accident or natural disaster
- modifications made to the solution without the written consent of Accessrec Europe
- repairs made without the written consent of Accessrec Europe
- labour or shipping costs that may be required if repairs are considered

If you are not satisfied with the conditions or repairs made, please contact Accessrec Europe directly. Products cannot be returned without the consent of Accessrec Europe. The five-year (5) warranty is only applicable to the original purchaser.

REFERENCES



Scan to discover our full range of chairs and equipment