


This user notice refers to Mobi-deck™, a modular access deck system.
Please read the following instructions carefully and always follow the safety guidelines.

PRODUCT ACCESSORIES

Spikes

Spikes are provided to anchor the Mobi-deck™ panels to the ground. They are galvanized and 50 cm (20 in.) long.
Each Mobi-deck™ panel includes: 2 connectors & 2 anchoring spikes

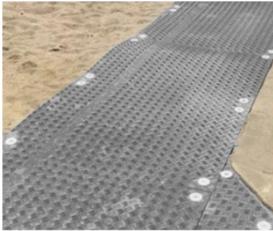

Connectors

To connect Mobi-deck™ panels together and create a stable surface, aluminum connectors are provided. These connectors are durable, highly resistant, and easy to install.

The use of anchoring spikes is not always necessary. Connectors allow the creation of modular access paths and make it possible to adapt the layout to your site configuration.

Aluminum connectors



*Double aluminum connectors
(create a platform)*



Bolt connectors (optional)



Double bolt connectors



APPLICATIONS & INSTALLATION

Mobi-deck™ provides stability on soft ground such as sand, grass, gravel, and snow. The panels are designed to offer comfort for barefoot users.

Mobi-deck™ panels withstand vehicle traffic, while providing safe access for people with reduced mobility and pedestrians.

With their 8 connection holes, Mobi-deck™ panels offer great modularity and can be configured in many layouts such as: pathways, platforms, crossroads etc. (see patterns below).

PRECAUTIONS FOR INSTALLATION

- Leave a small gap between each panel to accommodate thermal expansion (12–15 mm recommended, +/- ½"). **Dilatation of 2mm per linear meter for a 10°C temperature change.**
- Install Mobi-deck™ after 24 hours of thermal rest and adapted temperature (not extreme cold or hot) to prevent from dilatation effects.



Mobi-deck™ can be installed by one or two people. A 100 m (328 ft) section can typically be installed in approximately one hour. A hammer may be required if the ground is hard.

WARRANTY

DESCHAMPS offers a two (2) year warranty starting from the date of your Purchase Order. This warranty covers manufacturing defects only. Alterations resulting from normal use are not considered manufacturing defects. Damage caused by vandalism or by the passage of vehicles exceeding the intended or recommended use of the product is not covered.

- Normal wear and tear of Mobi-deck™
- Improper care, operation, maintenance, or storage
- Accidents or natural disasters
- Modifications made without written consent from DESCAMPS
- Maintenance or transportation costs related to repairs

If you are not satisfied with the warranty conditions or the repairs performed, please contact DESCAMPS directly.

Products may not be returned without prior authorization from DESCAMPS. This two (2) year limited warranty applies only to the original purchaser.

REFERENCES



Mobi-deck™ installation on the beach
Corsica, France











Mobi-deck™ installation at a fair
New Jersey, USA



Mobi-deck™ installation on cobblestones
France

2 people, 1 hour, 100m²

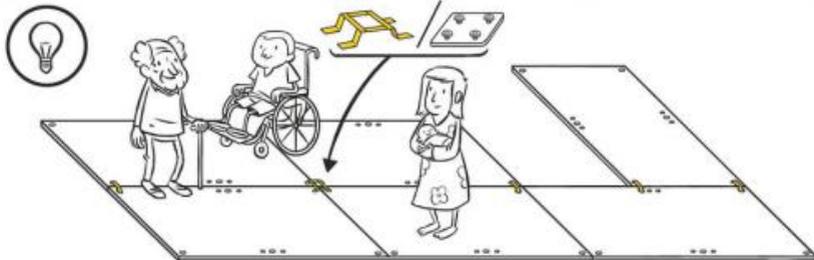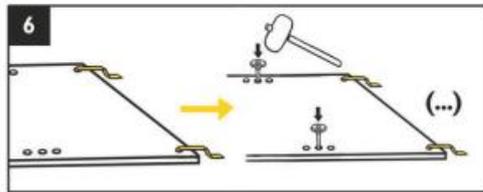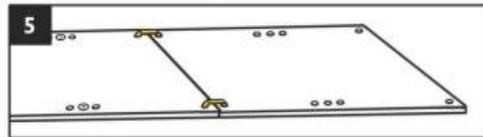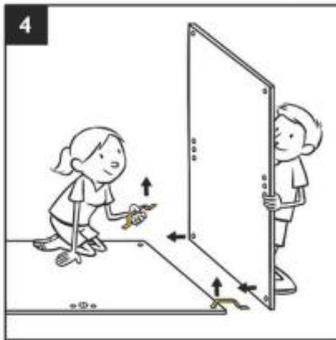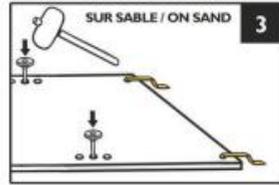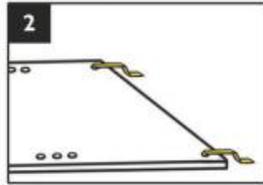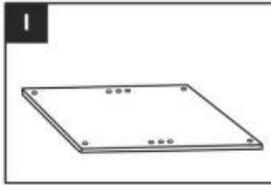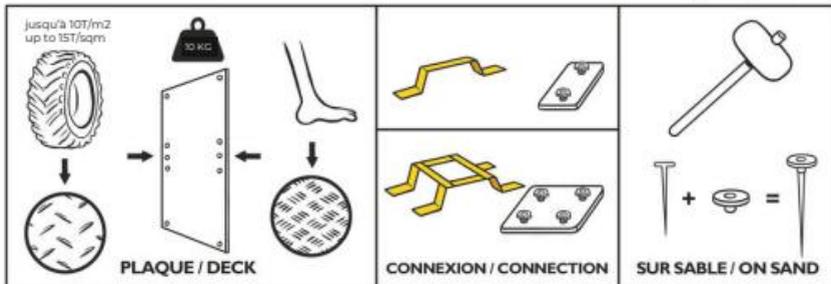

Email: info@mobi-mat.com

Website: www.mobi-mat.com